

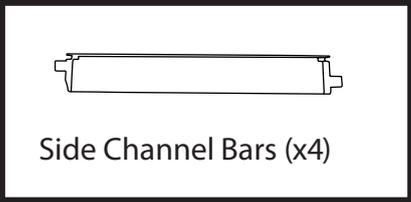


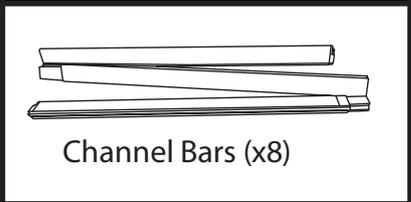


 PARTS (NOT TO SCALE)

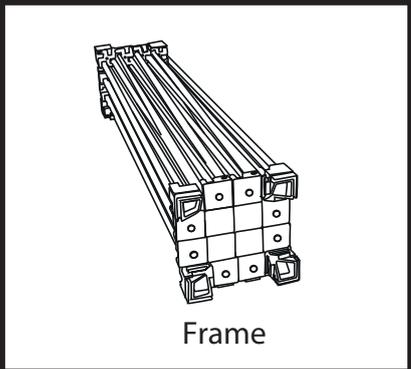



 FOR ATTENTION

INSTRUCTIONS BASED ON 3X3 FRAME


1

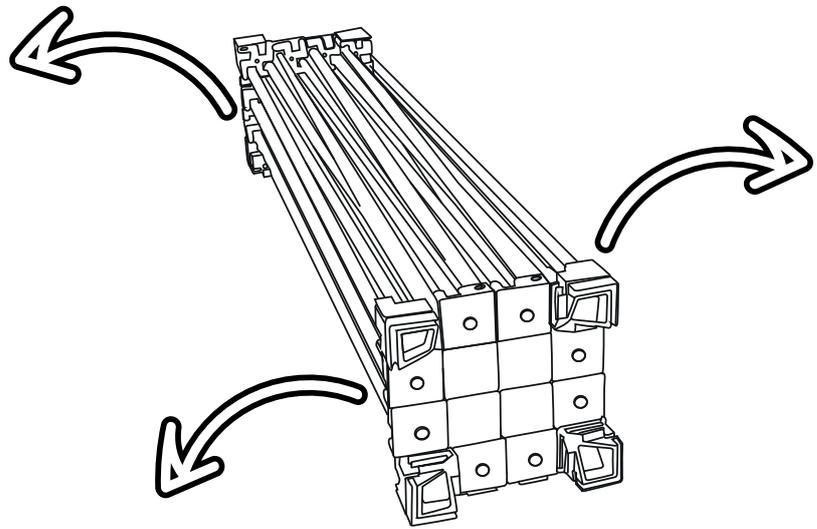



2

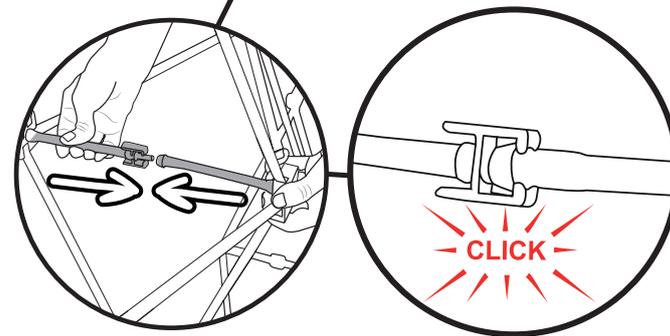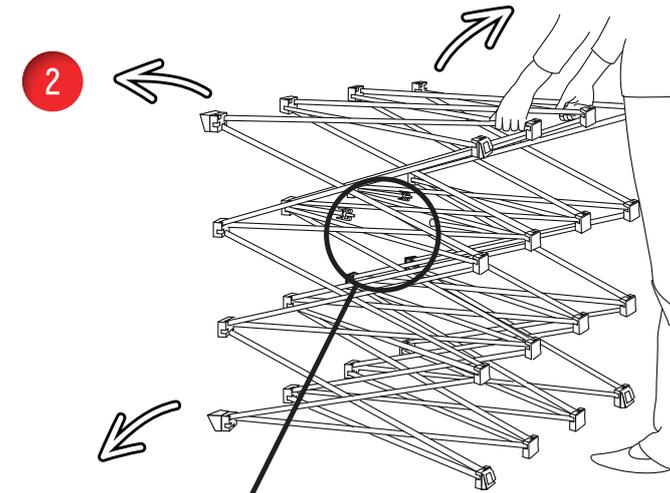


3

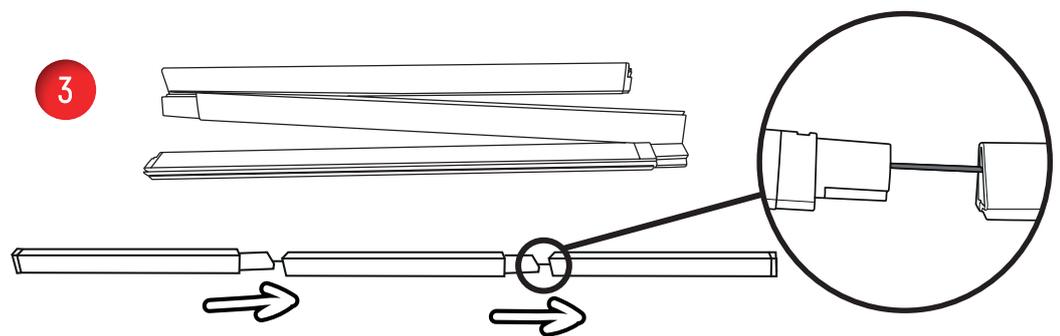


Backlit Display Wall

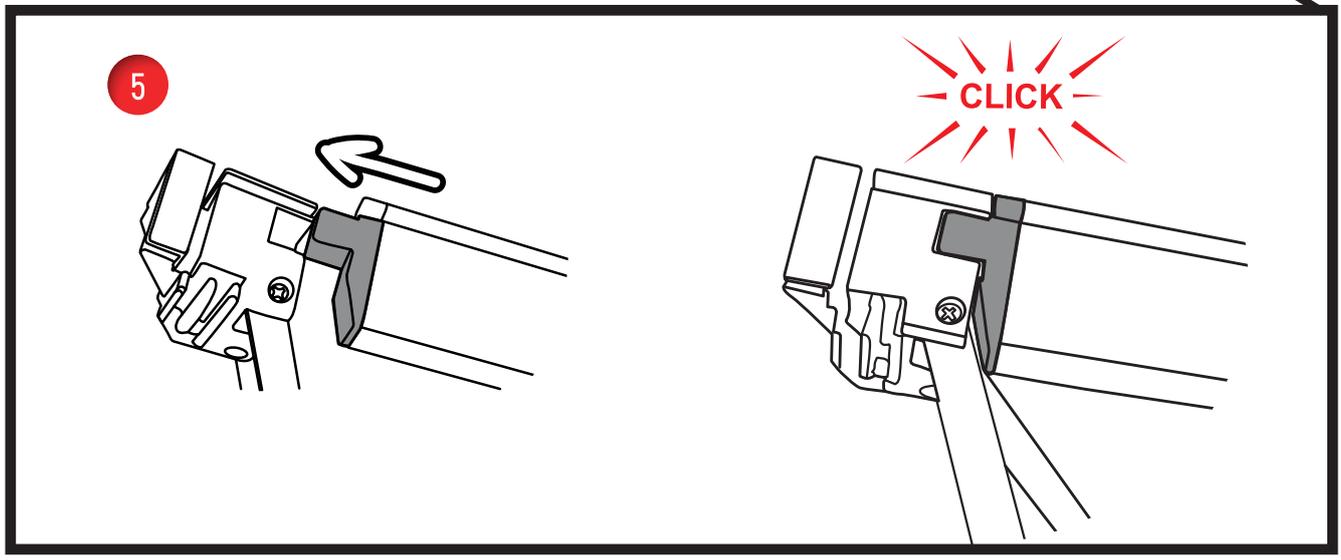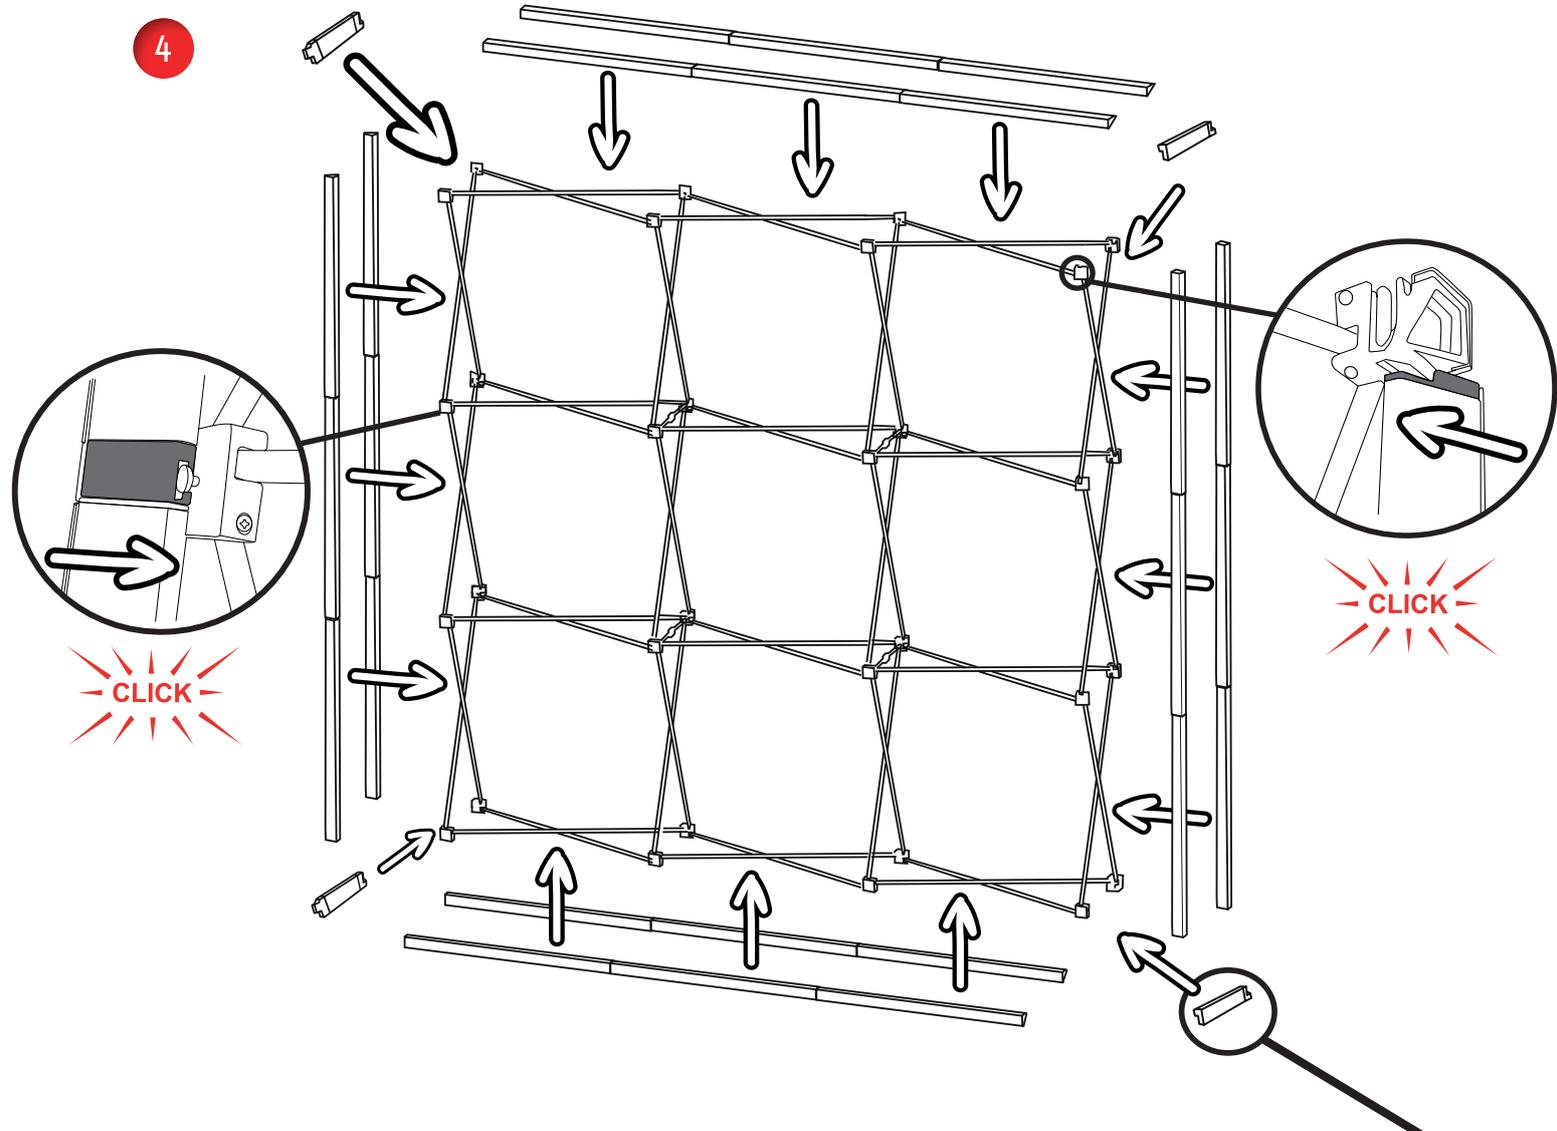

Backlit Display Wall

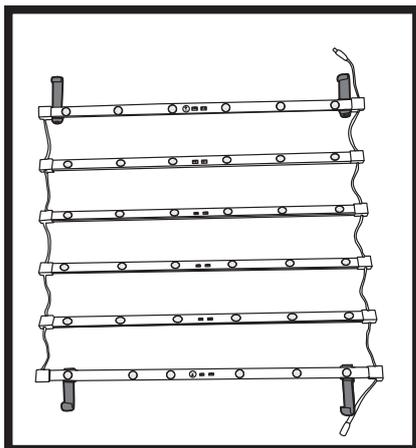

PARTS (NOT TO SCALE)

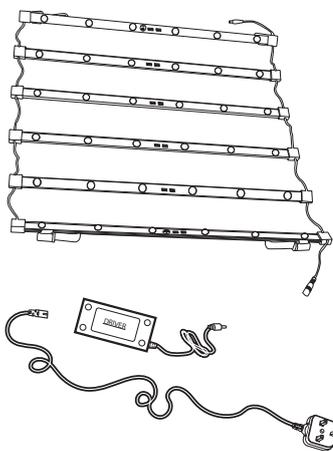


FOR ATTENTION


ENSURE ALL SOCKETS AND CONNECTORS ARE CORRECTLY FITTED BEFORE SUPPLYING POWER. MISUSE COULD RESULT IN DAMAGE TO THE LED LIGHTS

1

TWIST


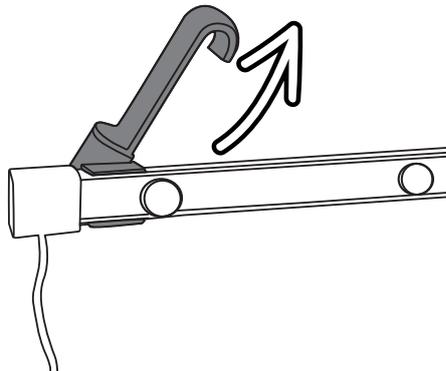


2

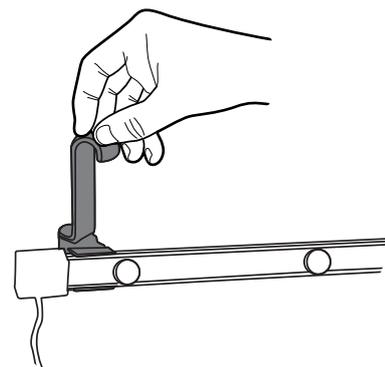



3

HOOK




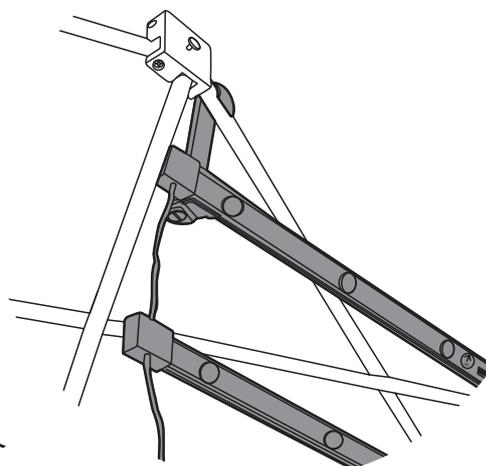
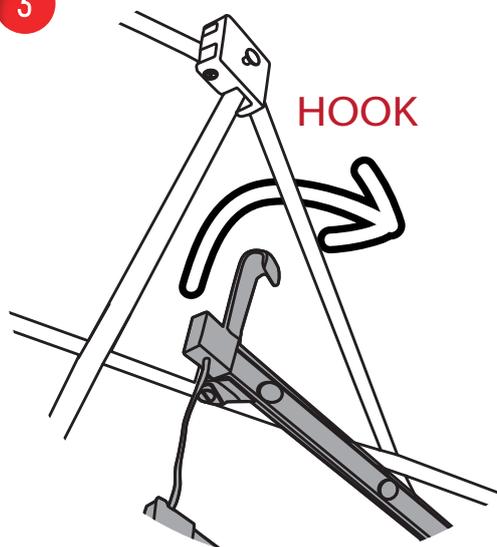


4

HOOK

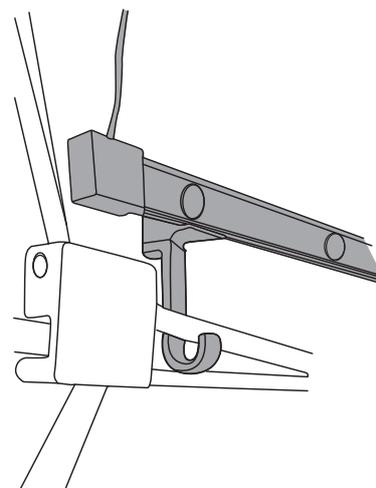
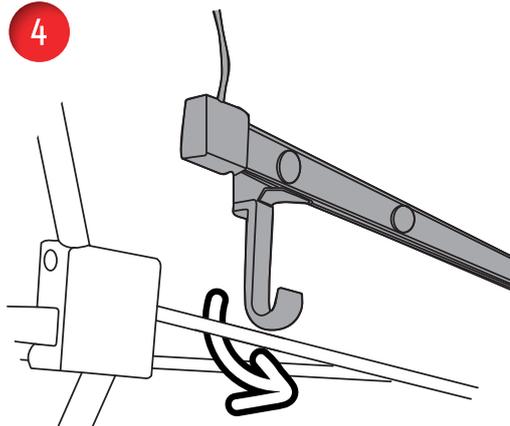


Diplay Wall LED Curtains

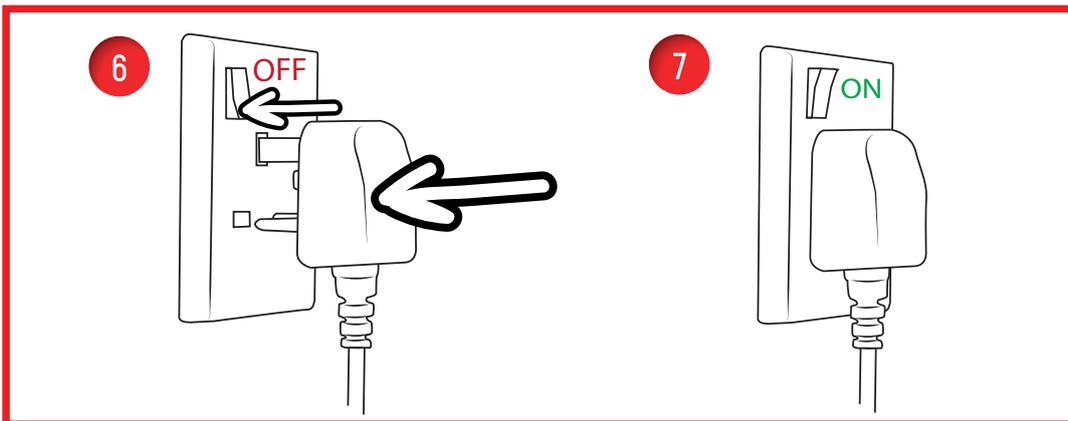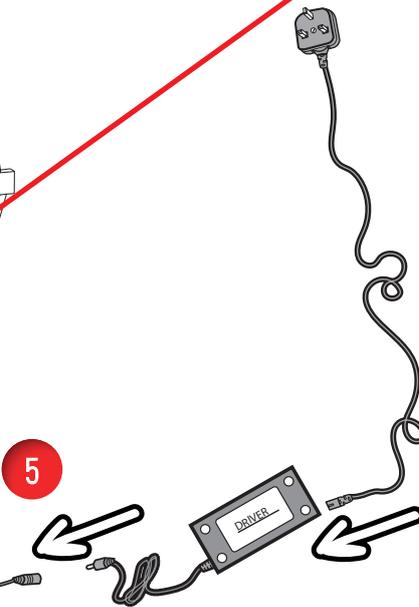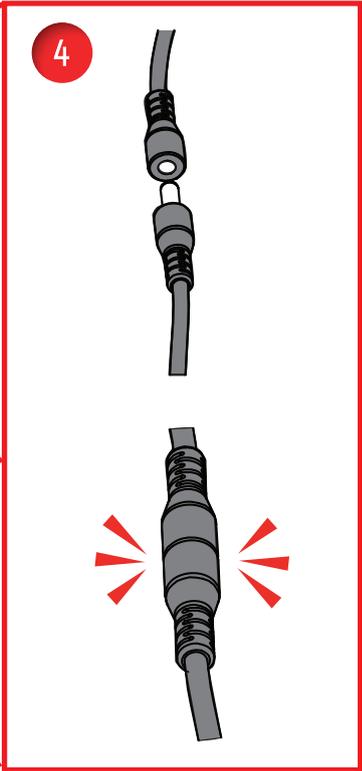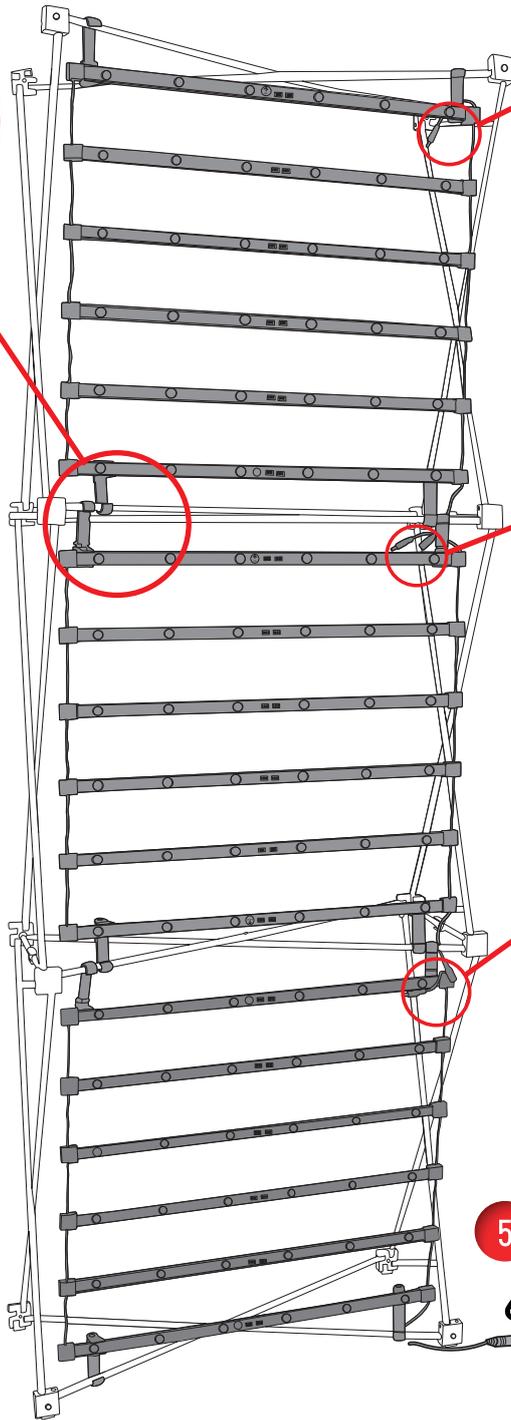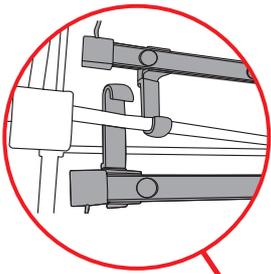



Attaching Graphics

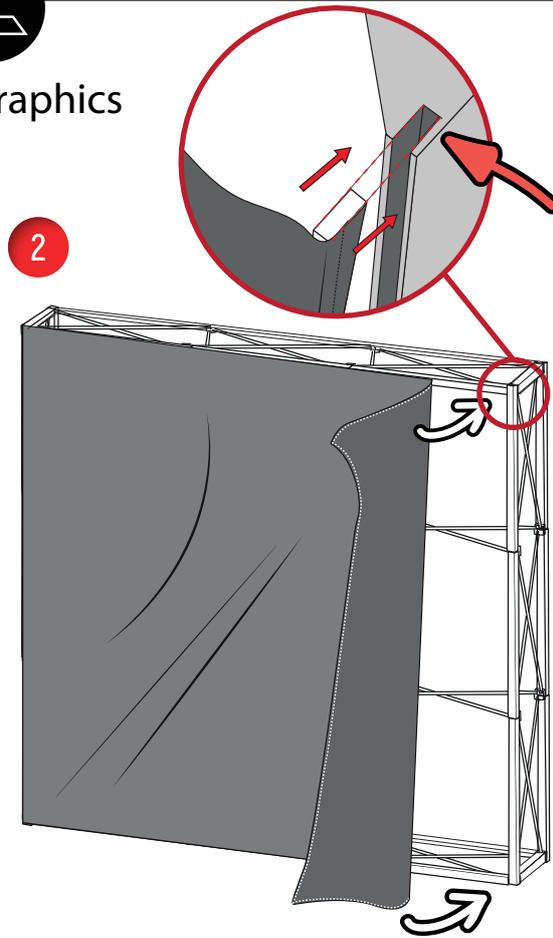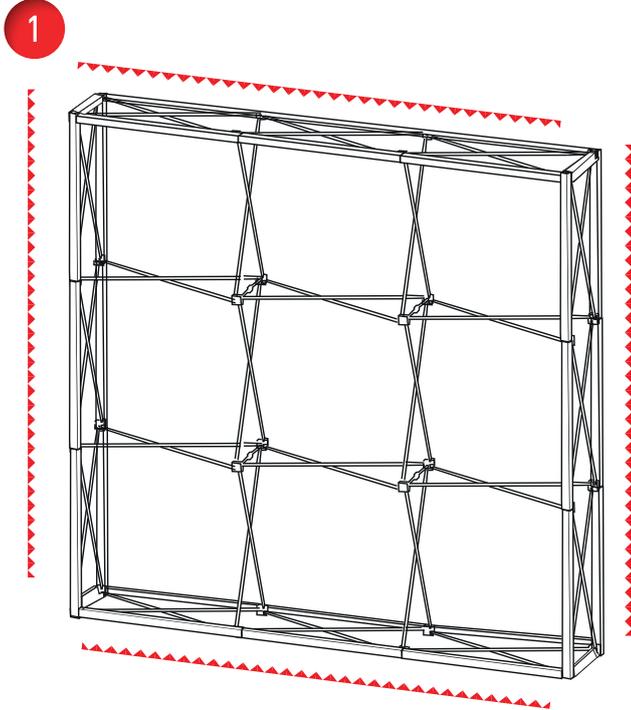

NOTE: Locate the Silicon Edge Gasket into the appropriate channel

