

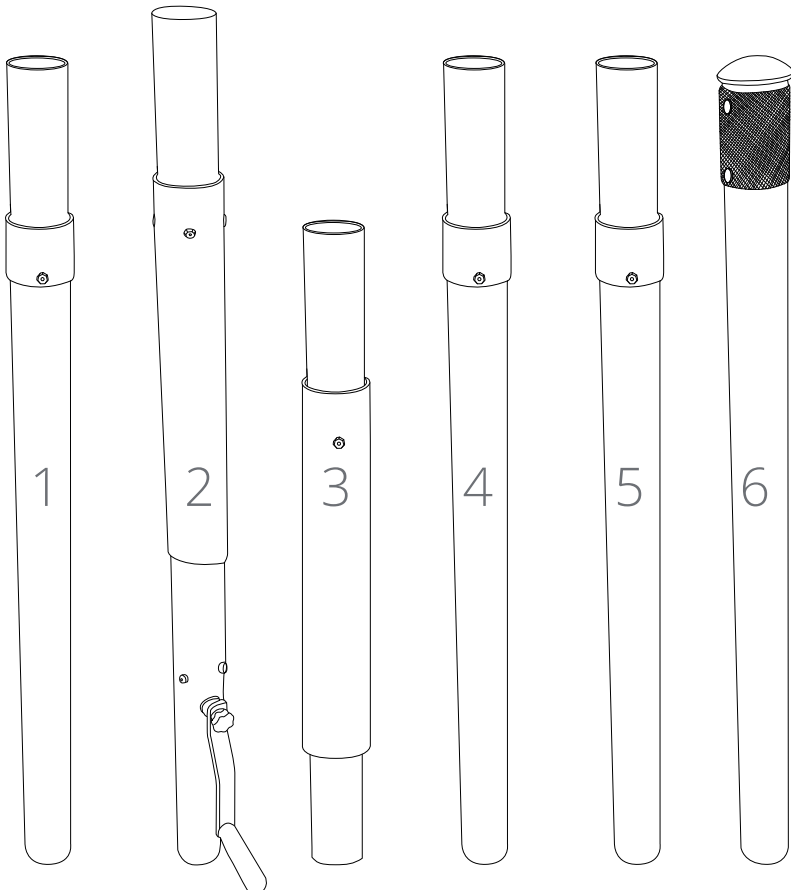
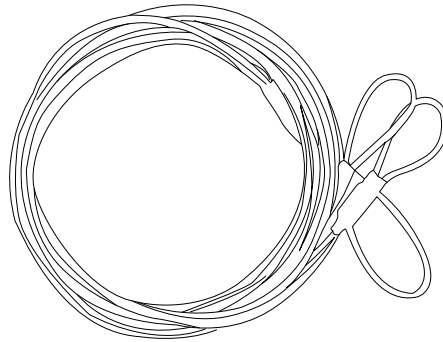
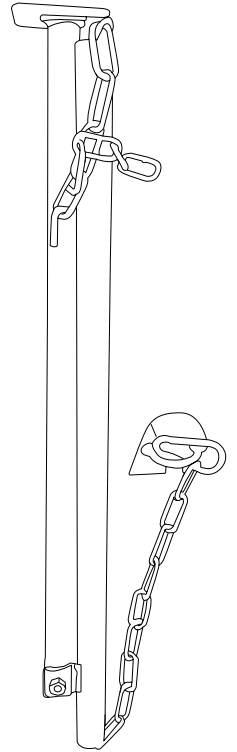
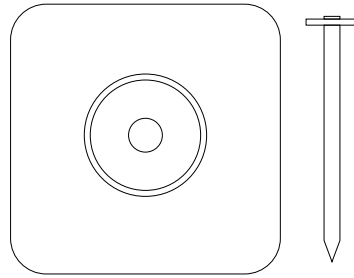


Kit Contents




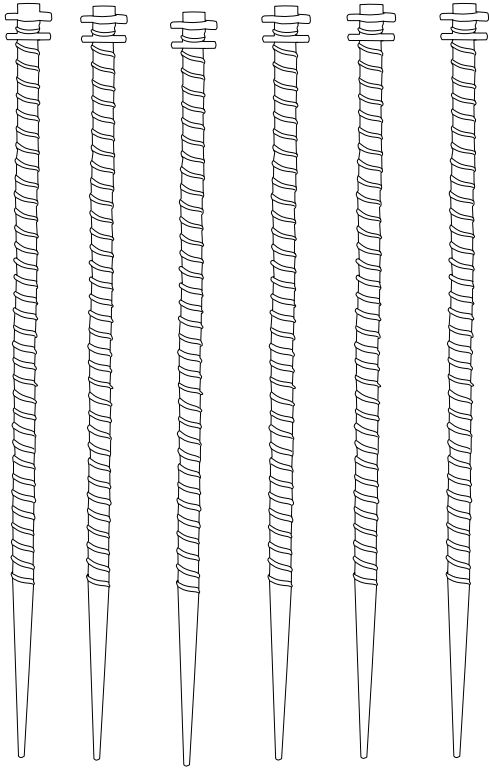


Required Tools


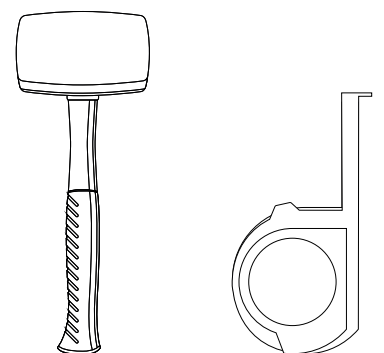


Assembly

1

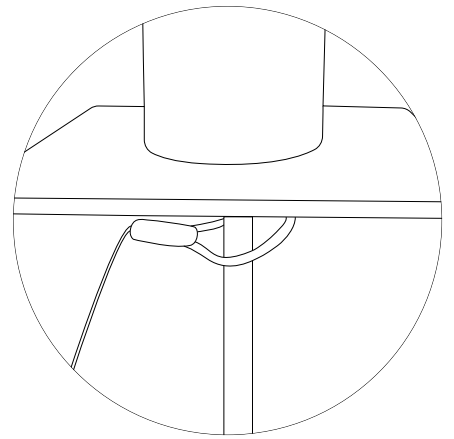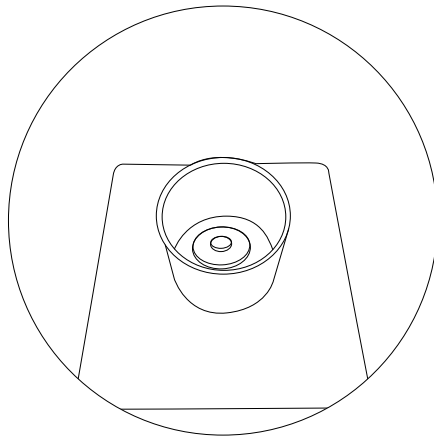
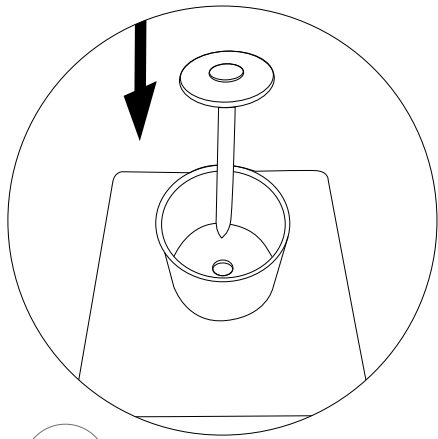
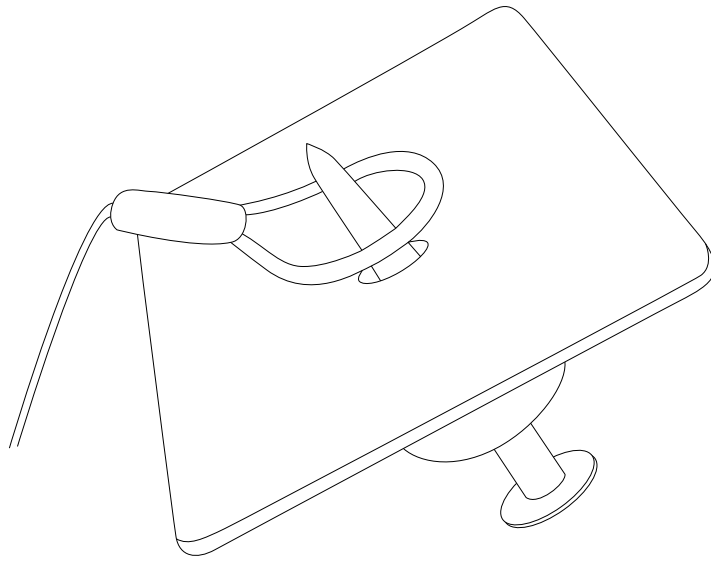


2

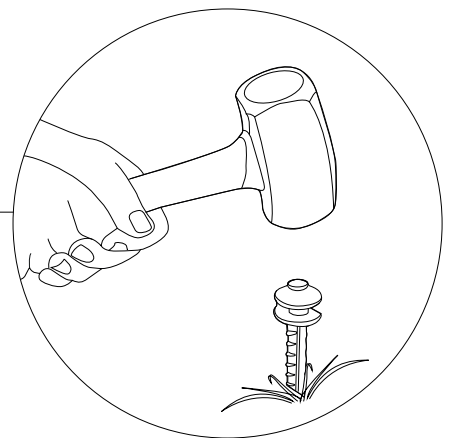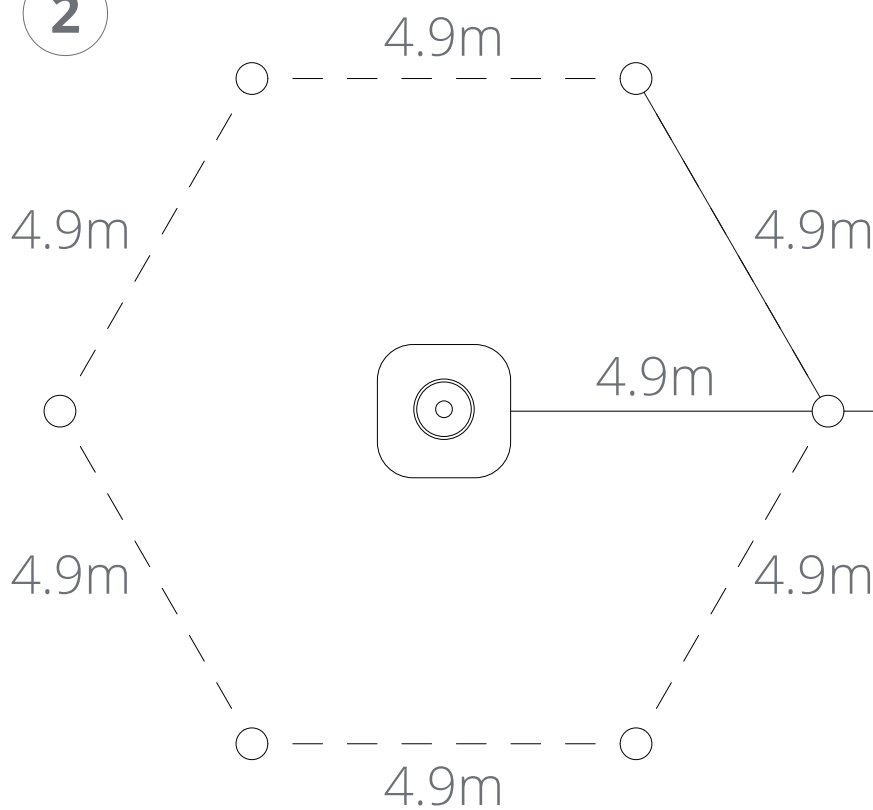


Leave x2 inches above ground

3

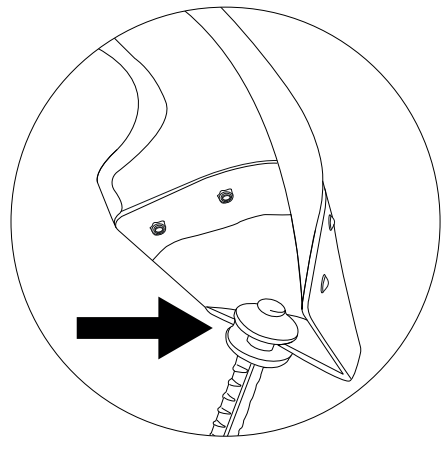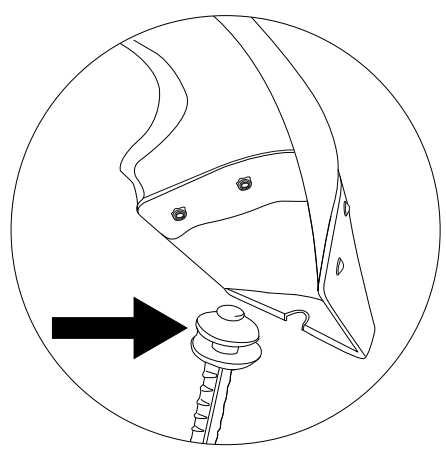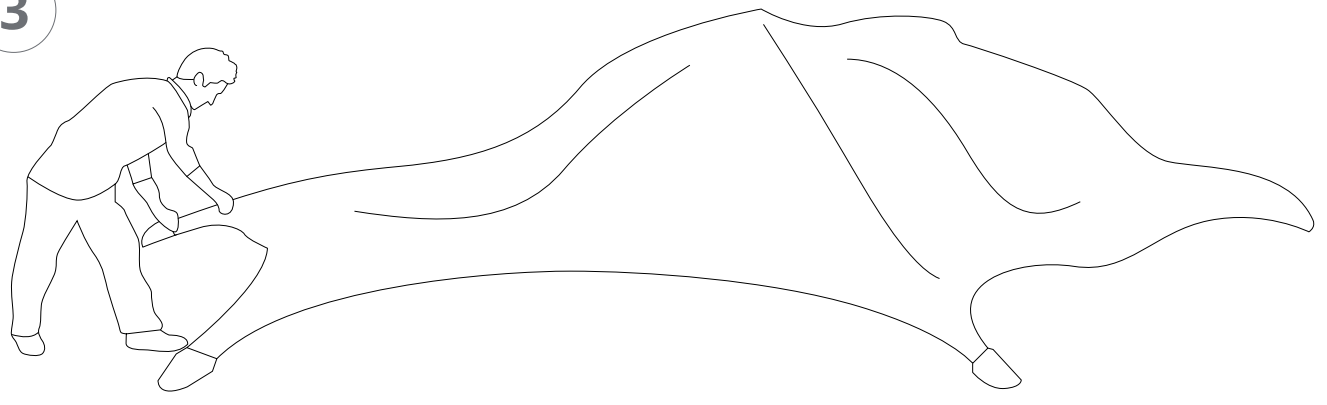


Attach x5 canopy legs


4

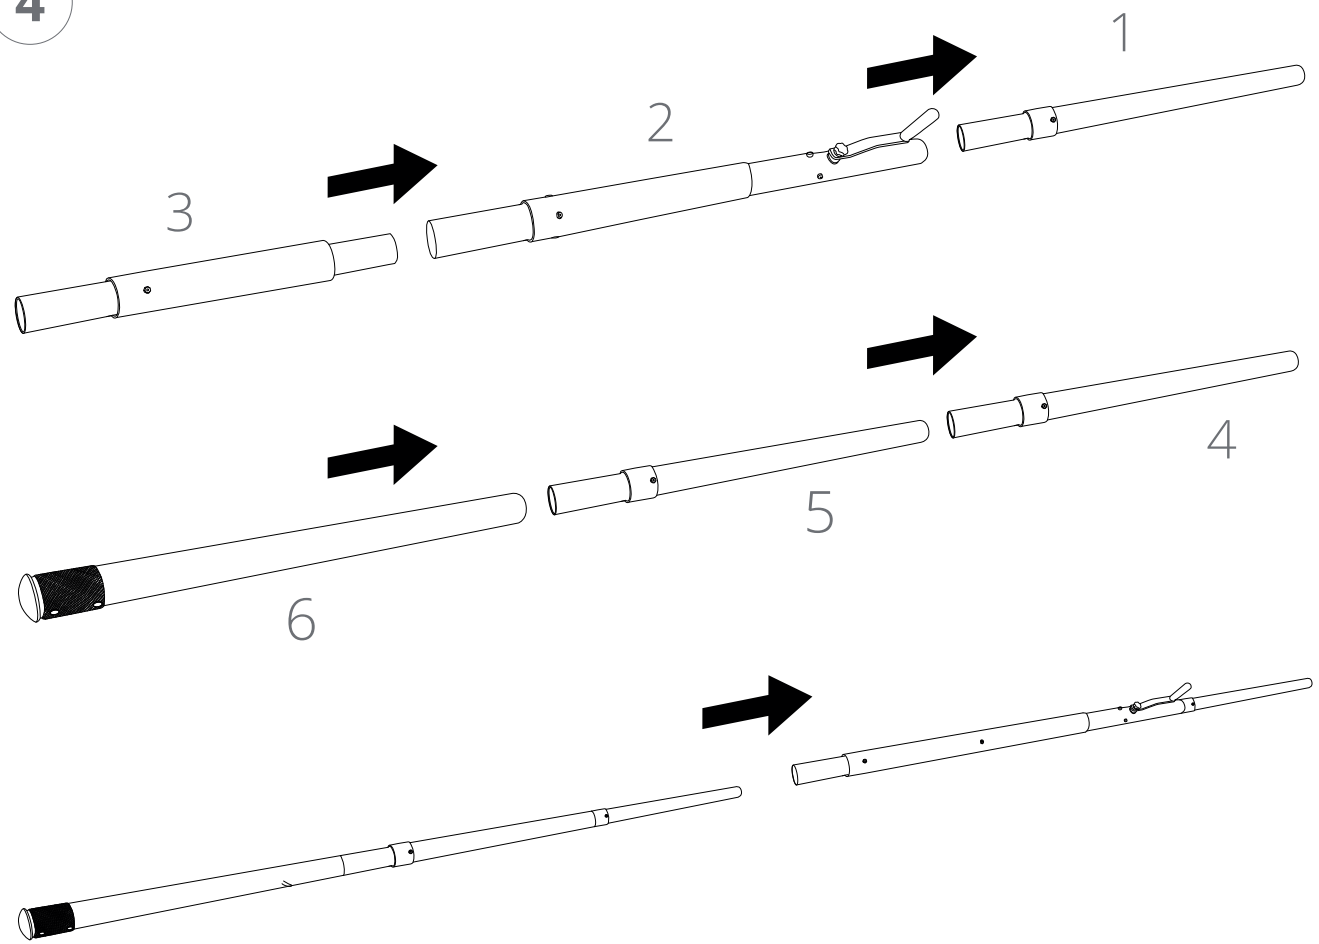

4

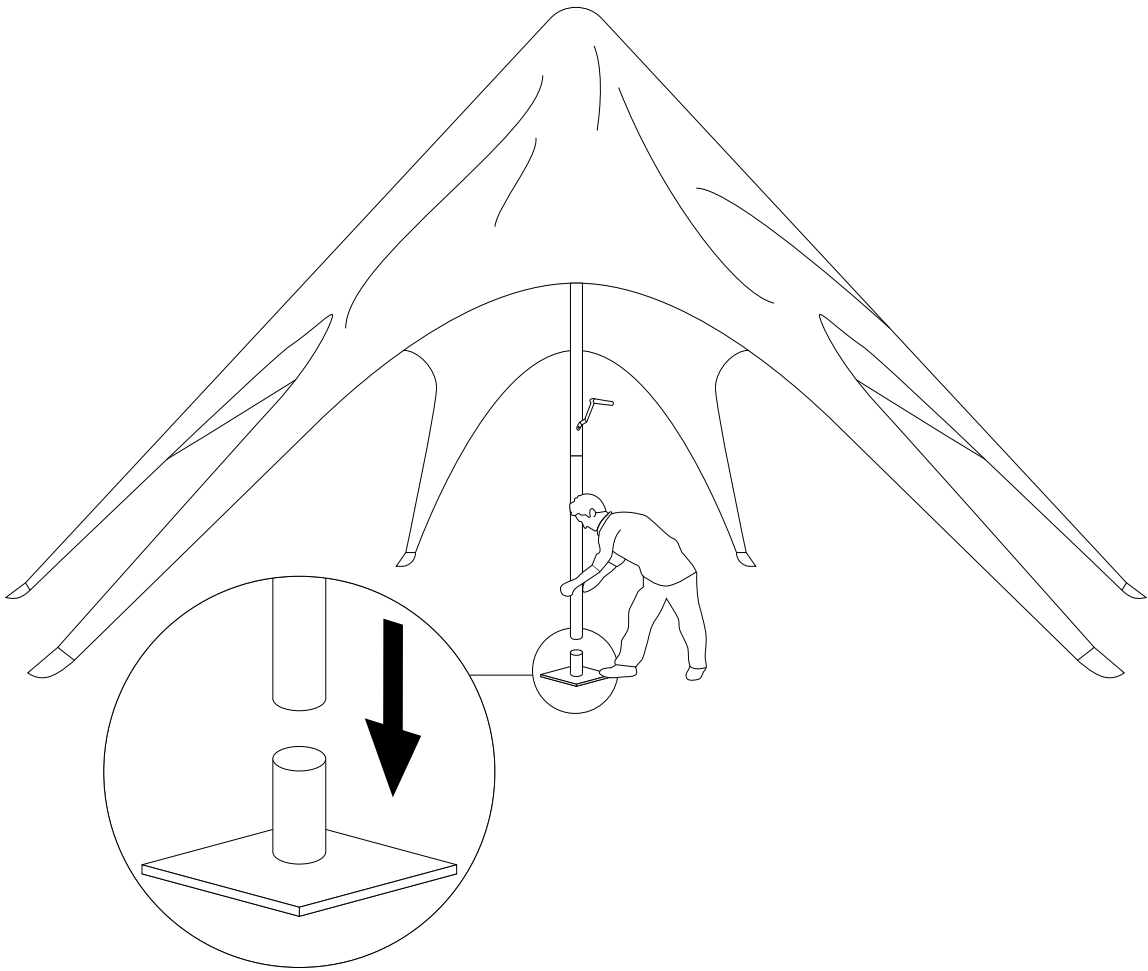

5

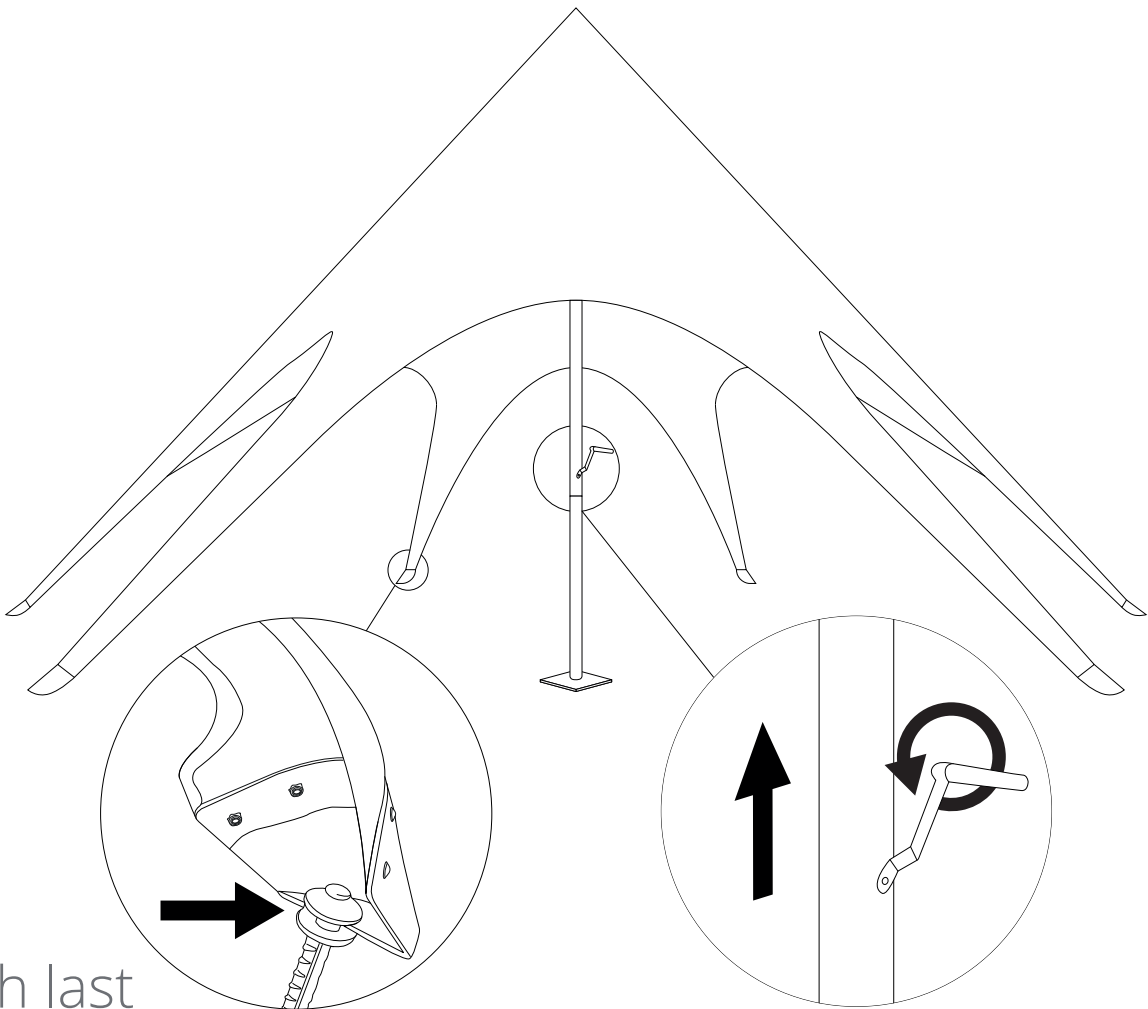

Attach last canopy leg

Disassembly

